


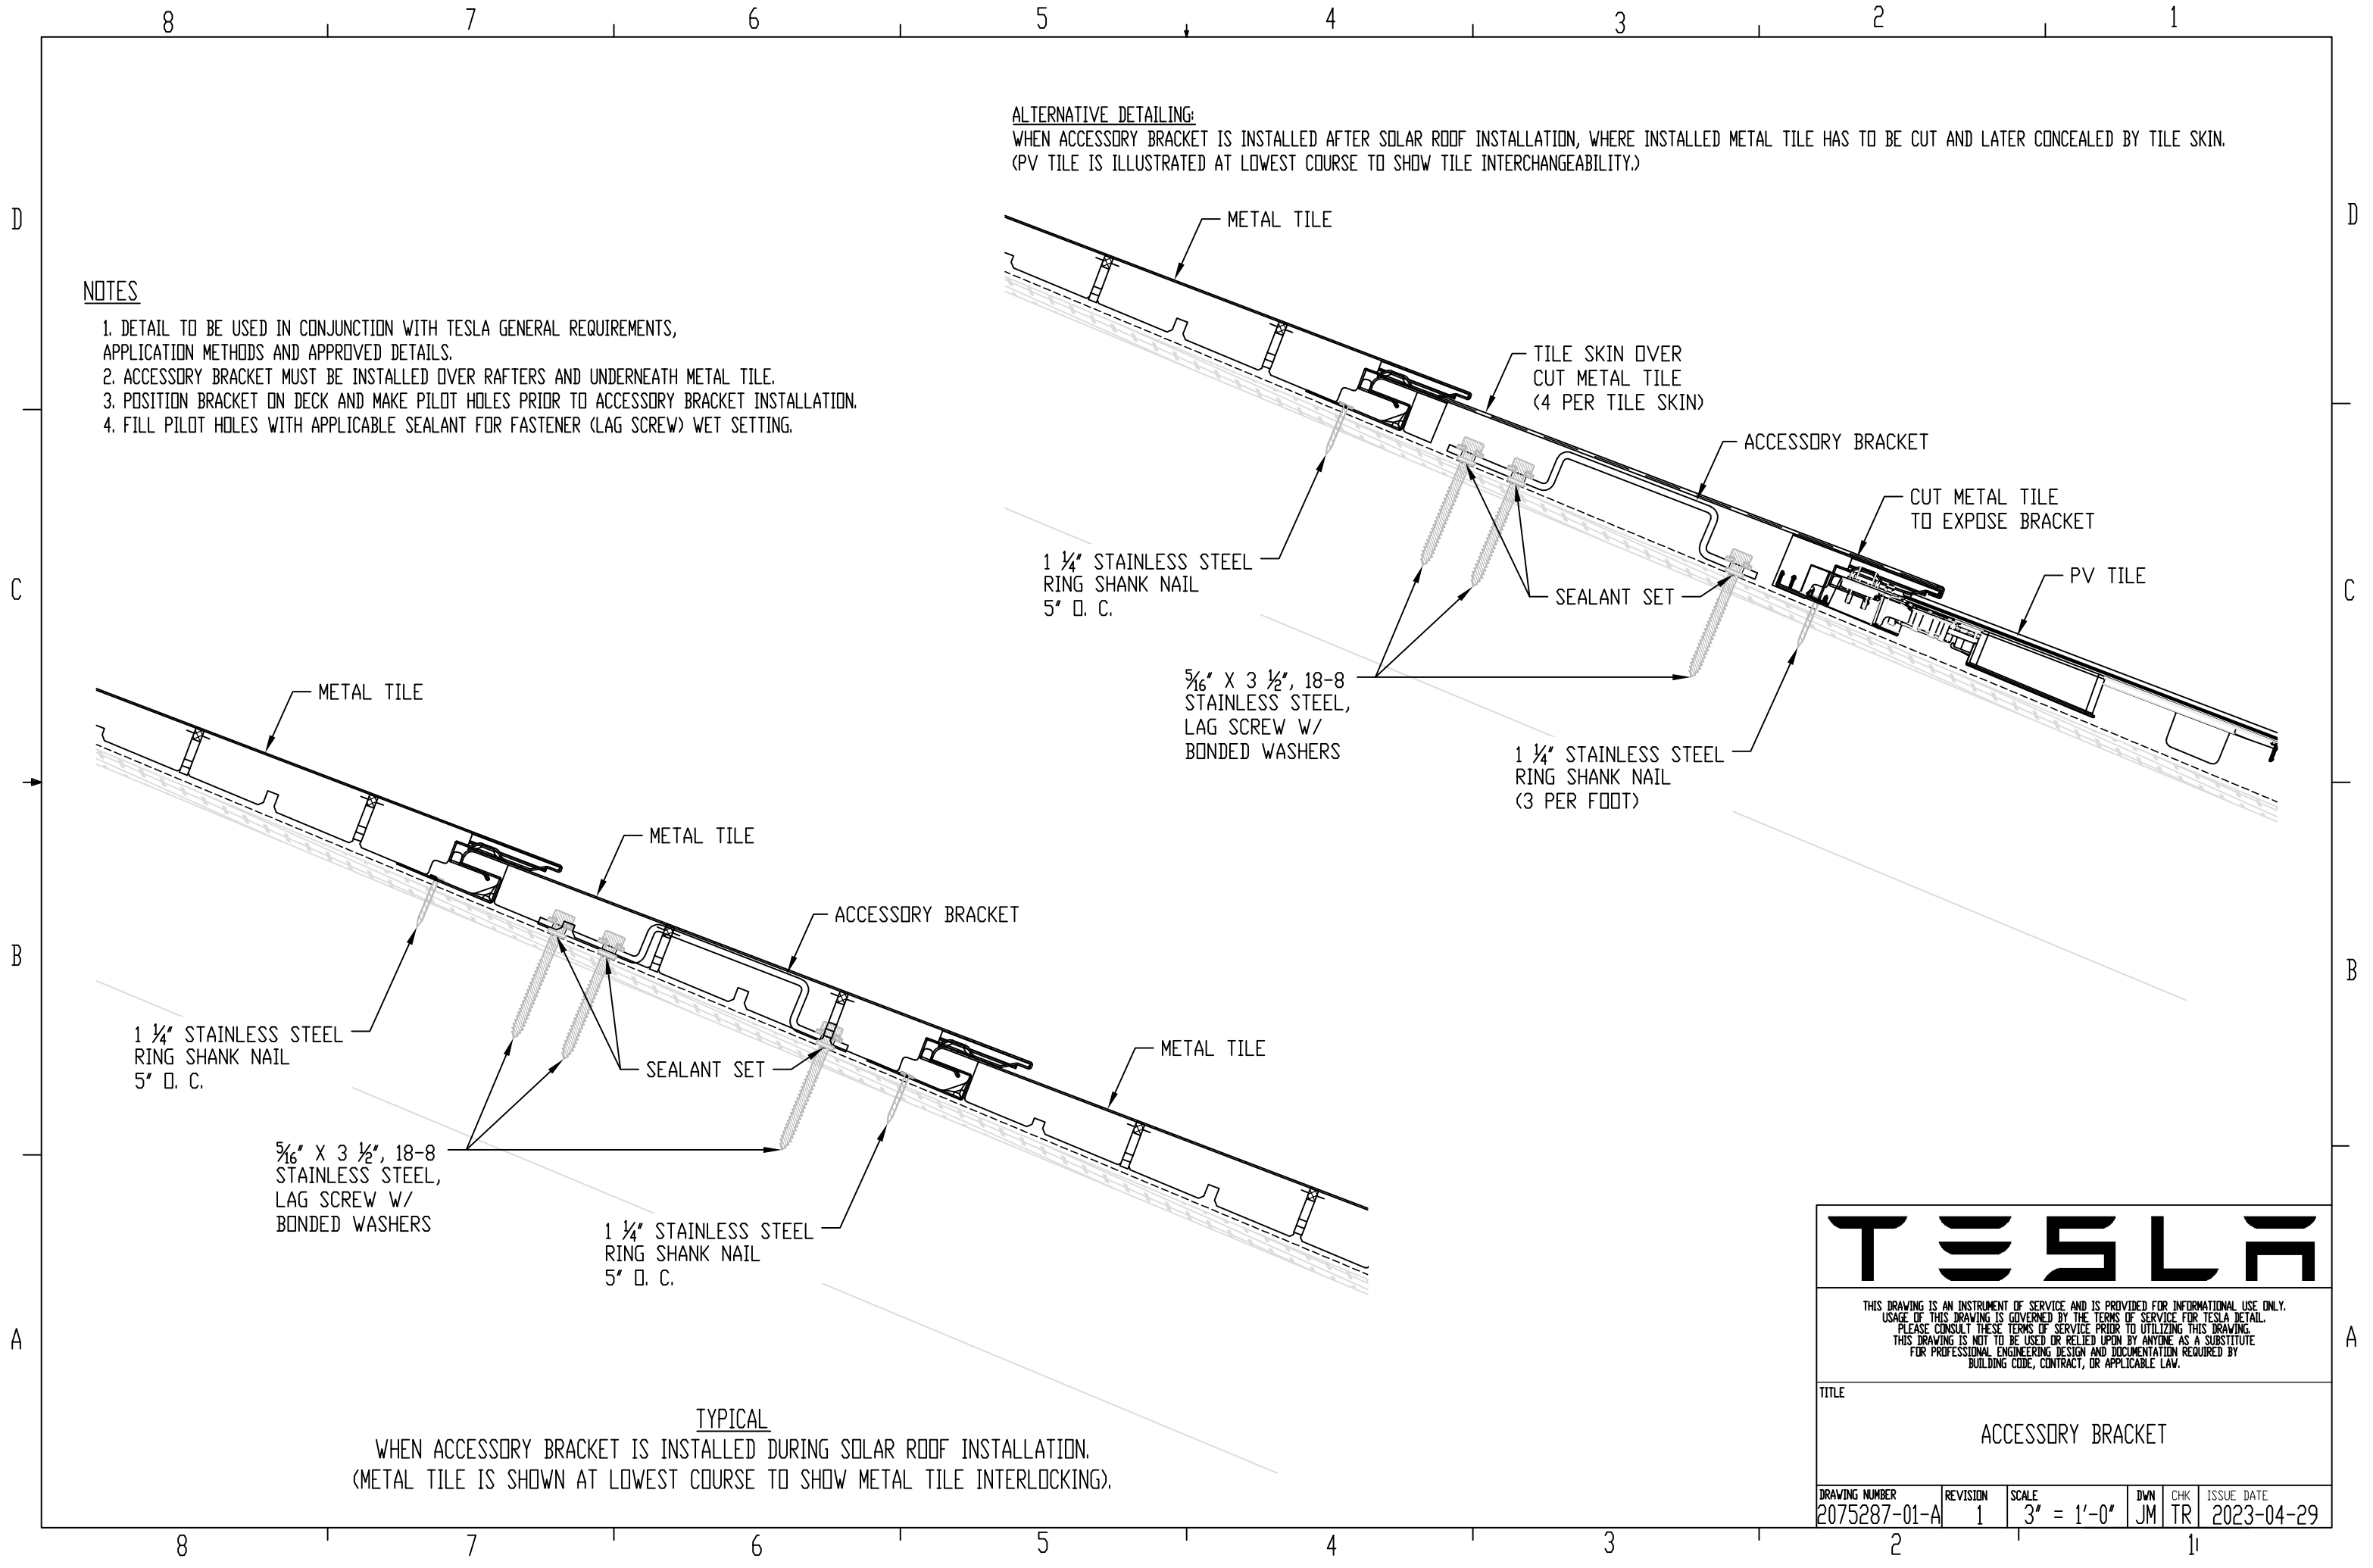

NOTES

1. DETAIL TO BE USED IN CONJUNCTION WITH TESLA GENERAL REQUIREMENTS, APPLICATION METHODS AND APPROVED DETAILS.
2. ACCESSORY BRACKET MUST BE INSTALLED OVER RAFTERS AND UNDERNEATH METAL TILE.
3. POSITION BRACKET ON DECK AND MAKE PILOT HOLES PRIOR TO ACCESSORY BRACKET INSTALLATION.
4. FILL PILOT HOLES WITH APPLICABLE SEALANT FOR FASTENER (LAG SCREW) WET SETTING.

ALTERNATIVE DETAILING:
WHEN ACCESSORY BRACKET IS INSTALLED AFTER SOLAR ROOF INSTALLATION, WHERE INSTALLED METAL TILE HAS TO BE CUT AND LATER CONCEALED BY TILE SKIN.
(PV TILE IS ILLUSTRATED AT LOWEST COURSE TO SHOW TILE INTERCHANGEABILITY.)

TYPICAL
WHEN ACCESSORY BRACKET IS INSTALLED DURING SOLAR ROOF INSTALLATION.
(METAL TILE IS SHOWN AT LOWEST COURSE TO SHOW METAL TILE INTERLOCKING.)

TESLA

THIS DRAWING IS AN INSTRUMENT OF SERVICE AND IS PROVIDED FOR INFORMATIONAL USE ONLY.
USAGE OF THIS DRAWING IS GOVERNED BY THE TERMS OF SERVICE FOR TESLA DETAIL.
PLEASE CONSULT THESE TERMS OF SERVICE PRIOR TO UTILIZING THIS DRAWING.
THIS DRAWING IS NOT TO BE USED OR RELIED UPON BY ANYONE AS A SUBSTITUTE
FOR PROFESSIONAL ENGINEERING DESIGN AND DOCUMENTATION REQUIRED BY
BUILDING CODE, CONTRACT, OR APPLICABLE LAW.

TITLE

ACCESSORY BRACKET

DRAWING NUMBER	REVISION	SCALE	DWN	CHK	ISSUE DATE
2075287-01-A	1	3" = 1'-0"	JM	TR	2023-04-29